

Mobileye 6 QuickStart

Document version: 1.0



In the box



EyeWatch



Main cable



EyeCAN adapter

Required equipment


- Laptop computer
- Measuring tools for calibration (tape measure and level are recommended)

Installation

1. Mount the Mobileye to the center of the windshield.
2. Connect the Mobileye to vehicle CAN via the Mobileye 6 main cable.
3. Connect the EyeWatch to the main cable.
4. Supply 12VDC power via BAT+ and GND. A 12V ignition signal is required.
5. Connect a laptop to the Mobileye via the EyeCAN adapter.
6. Use the Mobileye Setup Wizard to configure and calibrate the Mobileye Camera.
 - a. Download the Setup Wizard installer here: <https://www.mobileye.com/us/fleets/support/>

Additional information

See “Mobileye Calibration Guide” for more information on the Mobileye Setup Wizard.

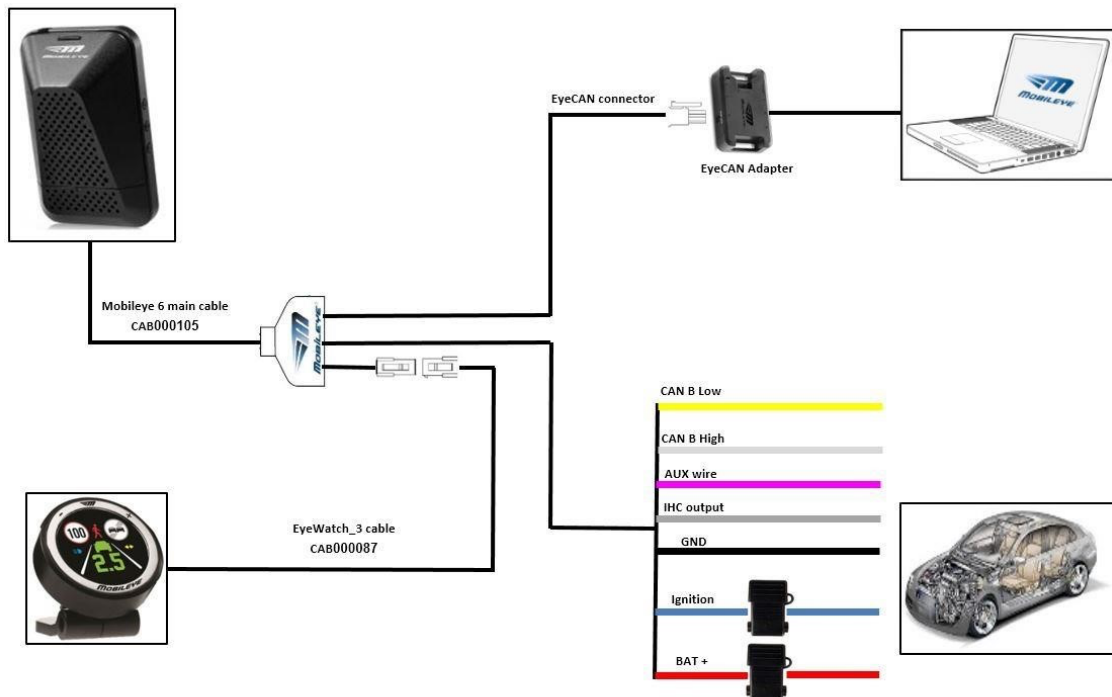

Mobileye 6 wiring diagram

Mobileye Setup Wizard Application v7.0.38

User Identification and Accessories

Username:

User password:

Login

Installation site:

[Please click here to read and accept the end-user license agreement](#)

Accessories

Vehicle database

< Back Next > Cancel

Mobileye setup wizard